• 00:05

Wireless lapel microphones are

• 00:06

used to amplify an instructor's

• 00:09

voice within the classroom.

• 00:10

And they are integral when

• 00:13

conducting synchronous classes

• 00:14

that include remote participants

• 00:16

attending via videoconference.

• 00:18

The wireless microphone consists of

• 00:21

a bodypack transmitter which can be

• 00:23

found within the classroom podium.

• 00:25

And a lapel microphone.

• 00:28

Open the battery door on the

• 00:30

Bodypack transmitter by pressing

• 00:32

in the buttons on either side,

• 00:34

locate the rechargeable batteries found

• 00:36

within the charger in the podium.

• 00:39

Insert the batteries,

• 00:41

ensuring proper polarity.

• 00:46

Connect the lapel microphone

• 00:48

to the BODYPACK transmitter.

• 00:49

Ensure that the black release

• 00:51

button is facing directly outward

• 00:53

and that the pins are aligned.

• 00:55

Do not force this connector

• 00:58

as the pins are a bit fragile.

• 01:01

Clip THE lapel mic as close

• 01:03

to your mouth as possible,

• 01:05

preferably on a collar.

• 01:07

Toggle the switch on the

• 01:08

BODYPACK transmitter to the on

• 01:10

position and note that the green

• 01:12

LED will now be illuminated.

• 01:14

The microphone should now be working.

• 01:16

Clip the BODYPACK transmitter

• 01:18

to your belt or pocket.

• 01:20

The microphone can be muted by

• 01:23

either turning the transmitter off

• 01:26

or on the Crestron touch panel.

• 01:28

Select mute and then mute mic.

• 01:32

To remove the lapel microphone

• 01:34

from the BODYPACK transmitter,

• 01:35

pressed the black release button

• 01:36

and firmly pull out the connector.

• 01:38

Be sure to put the batteries

• 01:40

back into the charger when you

• 01:42

are done using the microphone.

• 01:49

And leave the body pack

• 01:51

transmitter back in the podium.

• 01:53

Thank you for watching.